


RB19 Assembly & Loading

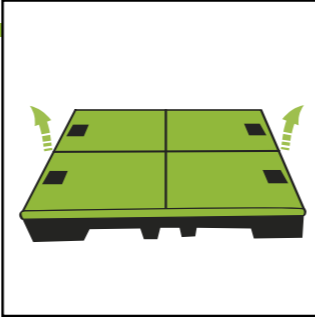
Quantity	Component	✓
1	Base & Return Collar	
1	Tray	
1	Sleeve	
1	Lid	

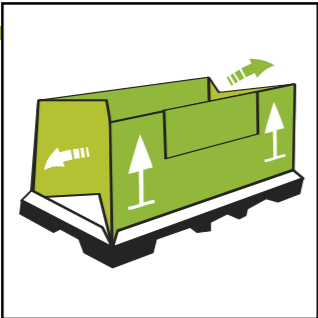
It is important that your RB19 is assembled in the correct way. If you are missing a component, contact Recolight immediately & do not attempt assembly.

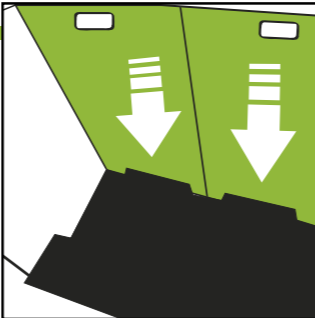
Assembly:

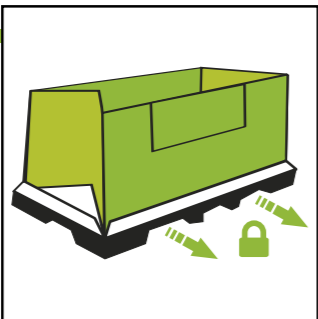
- 1** Unlock lid (x4)

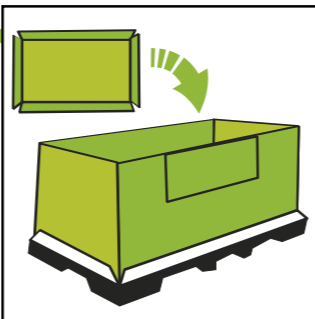

- 2** Remove lid and place to the side – two people required

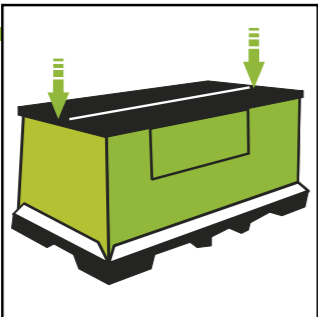

- 3** Put sleeve upright and slot into return collar



- 4** Push sleeve into track on the base of the container


- 5** Lock sleeve to pallet (x4) using the lock tabs at the base of the container.


- 6** Place tray inside container to line the base.

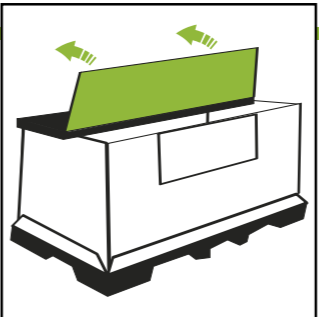

- 7** Place lid on container (2 people required)

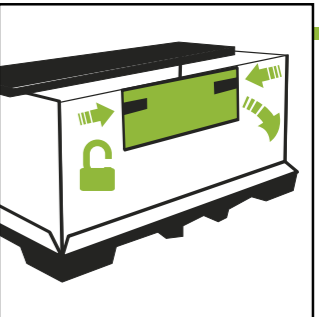

- 8** Lock lid (x4) and secure

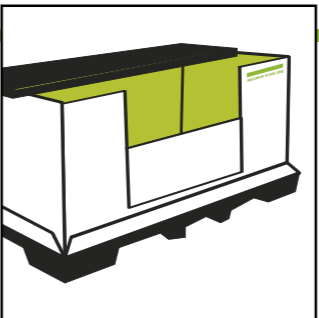


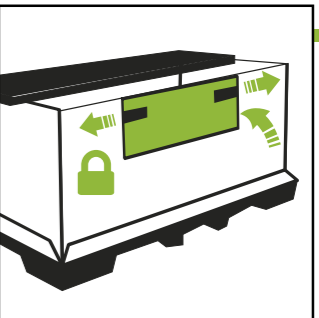
Loading:

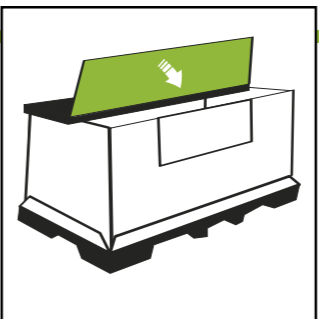
- 1** Open lid

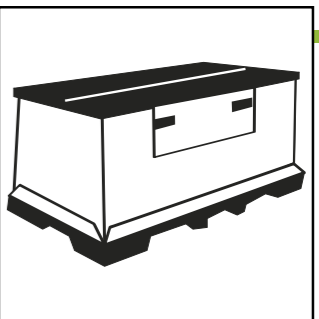

- 2** Open loading door

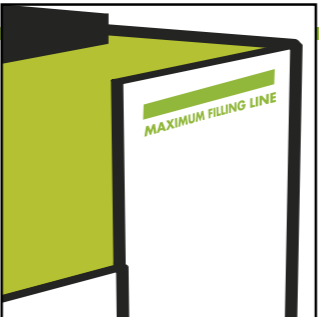

- 3** Ready for loading – place lamps neatly in container


- 4** Close loading door, ensuring tabs are secured


- 5** Close and secure lid with locking tabs x4


- 6** Container closed


- 7** Do not exceed filling line


- 8** Correct storage shown

